

## **TELEPÍTÉS**

## Aktív tartó fix bekötéssel



Please read all of the instructions and look at the pictures before attaching the mount.

- 1. Attach the mount: Place the mount into the desired position.
- 2. Attach it with the enclosed screws.
- 3. The mount is in place.
- 4. The mount is in place.



• Zebra MC3300; Zebra MC3400; Zebra MC3450





