




TELEPÍTÉS

Mount with tilt swivel

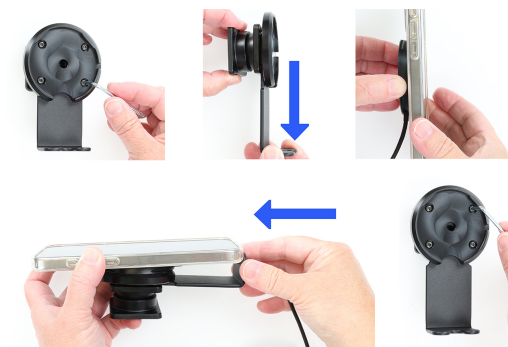

Please read all of the instructions and look at the pictures before attaching the holder.

1. To adjust the mount for your device: Loosen the screws on the front side of the mount. Place the Magnetic Charger on your device. Place the device above the mount and adjust the support. Tighten the screws on the front side of the mount.



2. Loosen the screw in the center of the mount so you can remove the tilt swivel attaching plate on the back. Place the attaching plate onto the desired position.

Screw the attaching plate into place with the enclosed screws. Place the mount over the attaching plate so the screw fits in the hole in the tilt swivel and screw it into place. Tighten the screw so the mount is firmly in place, but still can be adjusted.



3. Carefully press the Magnetic charger upwards against the grooves in the bracket, press the bottom of the Magnetic charger forward so that it snaps into place. Remove the Magnetic charger from the bracket: Press the lower part of the Magnetic charger upwards and out of the bracket.

4. The mount is in place.

The mount to hold an Magnetic Charger is designed for use in ordinary driving conditions. Please be aware that in certain situations, such as driving on bumpy roads or a sudden braking/maneuvering of a vehicle, it is possible that the Magnetic Charger device may be dislodged from the mount holding it. Use of the mount holding an Magnetic Charger is at the user's sole discretion and



risk. Brodit AB is not responsible for any damage caused by a device being dislodged from the mount holding a Magnetic Charger.

Az alábbiakkal kompatibilis

- Apple iPhone 12; Apple iPhone 12 Mini; Apple iPhone 12 Pro; Apple iPhone 12 Pro Max; Apple iPhone 13; Apple iPhone 13 Mini; Apple iPhone 13 Pro; Apple iPhone 13 Pro Max; Apple iPhone 14; Apple iPhone 14 Plus; Apple iPhone 14 Pro; Apple iPhone 14 Pro Max; Apple iPhone 15; Apple iPhone 15 Plus; Apple iPhone 15 Pro; Apple iPhone 15 Pro Max; Apple iPhone 16; Apple iPhone 16 Plus; Apple iPhone 16 Pro; Apple iPhone 16 Pro Max; Apple iPhone 17; Apple iPhone 17 Pro; Apple iPhone 17 Pro Max; Apple iPhone 18 Pro; Apple iPhone 18 Pro Max; Apple iPhone Air; Apple iPhone Duo
- Samsung Galaxy S22 5G SM-S901B/SM-S901B/DS; Samsung Galaxy S22 Ultra 5G (SM-S908B/SM-S908B/DS); Samsung Galaxy S22+ 5G (SM-S906B/SM-S906B/DS); Samsung Galaxy S23 SM-S911B/DS; Samsung Galaxy S23 Ultra SM-S918B/DS; Samsung Galaxy S23+ SM-S916B/DS; Samsung Galaxy S24 SM-S921B/DS; Samsung Galaxy S24 Ultra SM-S928B/DS; Samsung Galaxy S24+ SM-S926B/DS; Samsung Galaxy S25; Samsung Galaxy S25 Edge; Samsung Galaxy S25 FE; Samsung Galaxy S25 Ultra; Samsung Galaxy S25+; Samsung Galaxy S26; Samsung Galaxy S26 Ultra; Samsung Galaxy S26+; Samsung Galaxy Z Fold6; Samsung Galaxy Z Fold7
- Google Pixel 10; Google Pixel 10 Pro; Google Pixel 10 Pro Fold; Google Pixel 10 Pro XL; Google Pixel 11; Google Pixel 11 Pro; Google Pixel 11 Pro Fold; Google Pixel 11 Pro XL; Google Pixel 9; Google Pixel 9 Pro; Google Pixel 9 Pro XL