


TELEPÍTÉS

Rögzítő kiegészítők

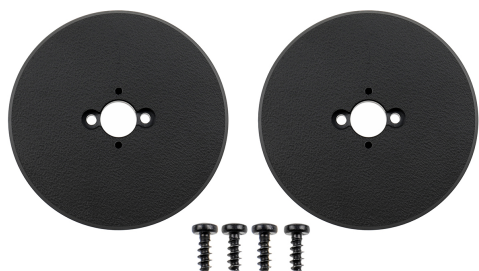

Please read all of the instructions and look at the pictures before attaching the holder.

1. Note! Some older printer mounts may lack pre-drilled holes. If your mount does not have them, download the drilling instruction (PDF) at www.brodit.com/en/product/217172 Once you have verified that the mount has pre-drilled holes, or drilled them according to the instruction, take out the spacer plates and the supplied screws.



2. Place one of the spacer plates onto the paper roll side support as shown in the picture. Attach the plate using the supplied screws.



3. Place the other spacer plate onto the opposite side support as shown in the picture. Attach the plate using the supplied screws.

4. The installation is complete.

Az alábbiakkal kompatibilis

