


TELEPÍTÉS

Mount

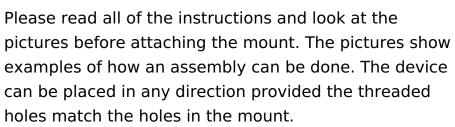



- 1. Position your Zebra device as shown in the image and fasten the device using the supplied screws.
- 2. Position the angled part of the bracket so that the holes align. Adjust the angle, then fasten the angled part. On the back of the U-Bracket, mount your pedestal mount.
- 3. The product fully assembled on a Bosch aluminum profile.
- 4. The product fully assembled on a Brodit pedestal mount.



• Zebra CV60



