




TELEPÍTÉS

ProClip



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Peel off both adhesive tape covers on the ProClip. Hook the angled upper edge of the ProClip over the panel edge by the windshield.

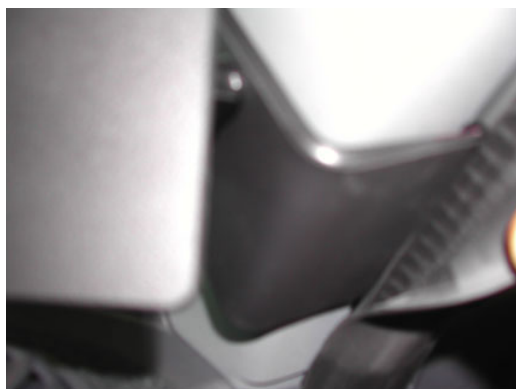

2. Press downwards on the ProClip so the angled lower edge hooks under the panel.

3. Press on both ends of the ProClip so the adhesive tapes attach.

4. The ProClip is in place.

Az alábbiakkal kompatibilis

- Smart Roadster (2003-2005)

