

TELEPÍTÉS

ProClip

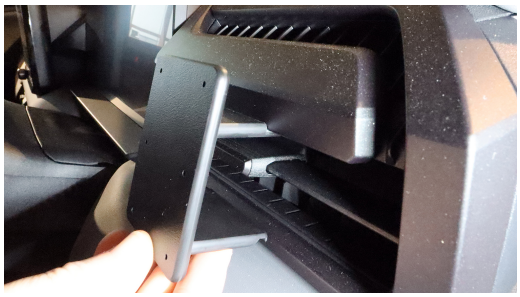

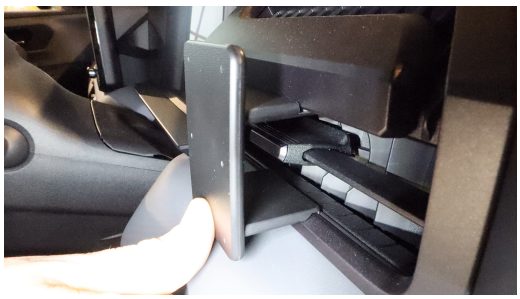





Please read all instructions and review the pictures before installing the ProClip mount. Important: The mount must be installed in the vehicle before attaching any device holder or accessory.

1. Clean the installation area using the enclosed alcohol wipe. Remove the protective liner from the double-sided adhesive tape.Hook the upper edge of the mount under the frame surrounding the air vent.

2. Press forward on the lower part of the mount so the edge hooks into the frame surrounding the air vent.

3. Press on the mount so it sits properly in place.

4. The ProClip mount is in place.

Az alábbiakkal kompatibilis

- Toyota RAV 4 (2027-2026)