

TELEPÍTÉS


ProClip



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end on the right side of the ProClip into the gap between the center console panel and the console edge.

2. Press down on the left side of the ProClip, towards the floor, so the angled edge hooks under the console edge by the floor.

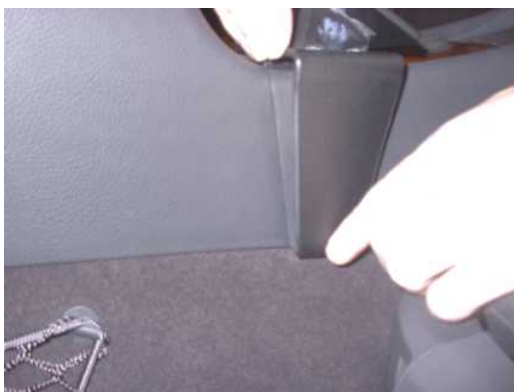

3. The ProClip is in place.

4. The ProClip is in place.

Az alábbiakkal kompatibilis

- Mercedes Benz E-Class, Coupé (2002-2009);
Mercedes Benz E-Class, Sedan (2002-2008);
Mercedes Benz E-Class, Stationwagon (2003-2009)

