





TELEPÍTÉS

ProClip

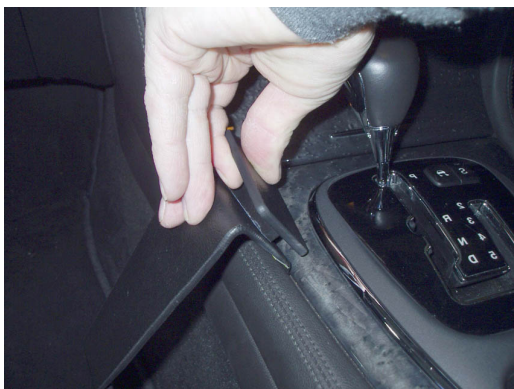

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Peel off the adhesive tape covers on the ProClip. Press the curved edge on the right part of the ProClip into the gap between the wood grain panel and the console.

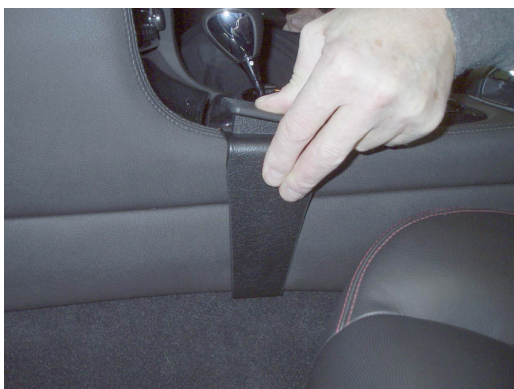

2. Press downwards on the left side of the ProClip so the angled edge on the lower part of the ProClip hooks under the edge of the console.

3. The ProClip is in place.

4. The ProClip is in place.

Az alábbiakkal kompatibilis

- Jaguar XJ (2003-2009)

