




TELEPÍTÉS

ProClip

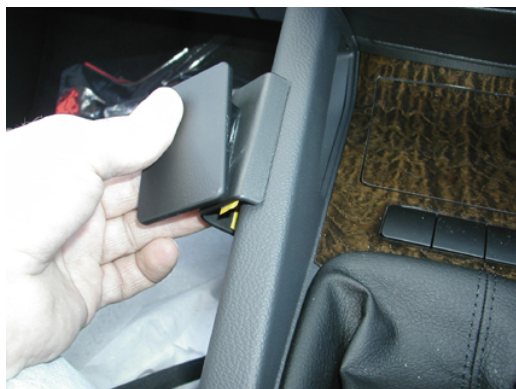

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Peel off the cover of adhesive tape on the ProClip. Hook the angled edge on the left side of the ProClip under the console post.

2. Press the ProClip leftwards so the angled edge on the right side of the ProClip snaps over the console post.

3. The ProClip is in place.

4. The ProClip is in place.



Az alábbiakkal kompatibilis

- Volkswagen Jetta (2006-2010)

