




# TELEPÍTÉS

## ProClip



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Place the angled edge on the right part of the ProClip over the edge of the console.

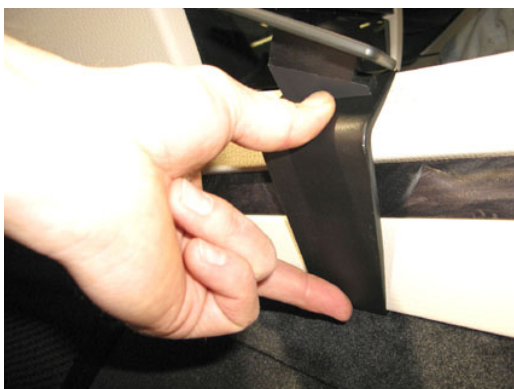

2. Press down on the left side of the ProClip so the angled edge hooks under the edge of the console.

3. The ProClip is in place.

4. The ProClip is in place.

## Az alábbiakkal kompatibilis

- BMW 7-series F01, F02 (2009-2015)

