




TELEPÍTÉS

ProClip

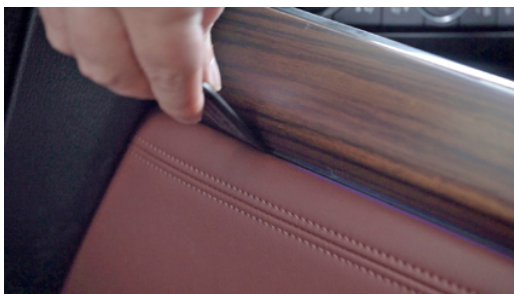

Please read all of the instructions and look at the pictures before installing the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Insert the thin end of the enclosed gap opener into the gap between the upper and lower left center console side panels, to widen the gap.



2. Remove the adhesive tape cover on the ProClip. Press the angled left edge of the ProClip into the gap next to the gap opener. Remove the gap opener.



3. Flex the right side of the ProClip rightward/upward, hook the angled edge of the ProClip into the seam on the leftmost edge of the top of the center console.

4. The ProClip is in place.



Az alábbiakkal kompatibilis

- Mazda CX-9 (2016-2023)