




TELEPÍTÉS

ProClip

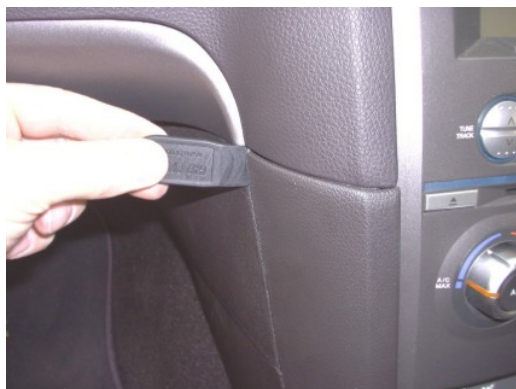


Attention! Read all instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap opener into the gap in the dashboard to widen the gap. Peel off the adhesive tape covers on the ProClip.



2. Press the short right part of the ProClip into the gap between the control panel and the dashboard.

3. Press forwards on the left part of the ProClip so the long left part hooks into the gap below the gap opener. Pull out the gap opener.

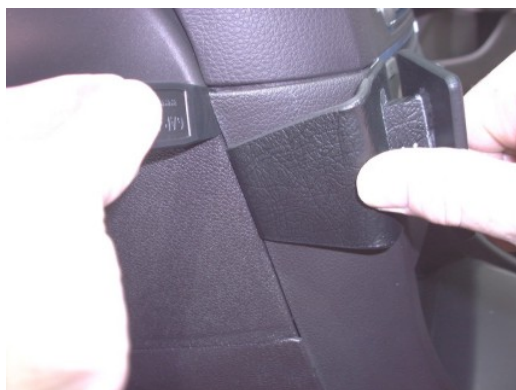

4. The ProClip is in place.

Az alábbiakkal kompatibilis

- Ford Falcon (2003-2009)

