




TELEPÍTÉS

ProClip



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap opener into the gap in the console sidewall, to widen the gap. Peel off the adhesive tape covers on the ProClip. Press the angled edge on the left part of the ProClip into the gap between the control panel and the dashboard.

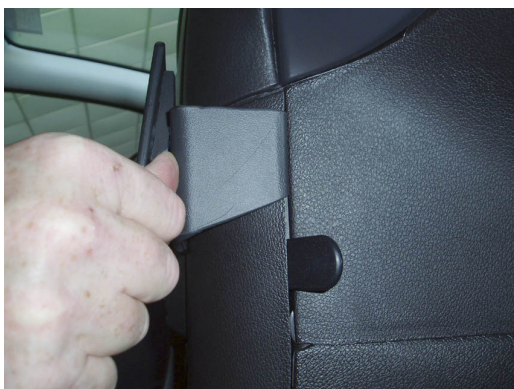

2. Press forwards on the right side of the ProClip so the angled edge on the right part snaps into the gap above the gap opener. Pull out the gap opener.

3. The ProClip is in place.

4. The ProClip is in place.



Az alábbiakkal kompatibilis

- Ford Falcon (2003-2009)

