

TELEPÍTÉS

ProClip



Please read all of the instructions and look at the pictures before attaching the ProClip.


1. A mellékelt alkoholos kendő segítségével tisztítsa meg azt a területet, ahová a ProClip kerülni fog. Peel off the adhesive tape cover on the ProClip. Place the left part of the ProClip over the center console frame.



2. Press forward on the right side of the ProClip so the angled edge hooks around the center console sidewall.

3. Press the right side of the ProClip toward the center console sidewall so the angled edge snaps into place.

4. A ProClip a helyére került.

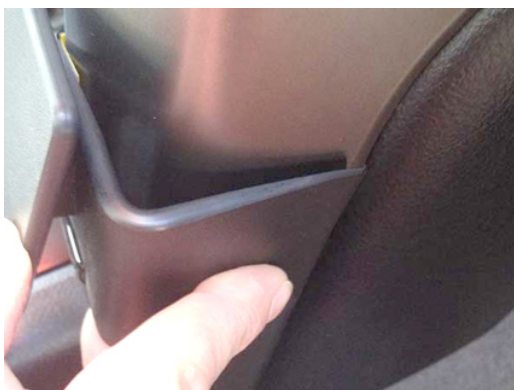

Az alábbiakkal kompatibilis

- Toyota Prado (2015-2014)

