





TELEPÍTÉS

ProClip

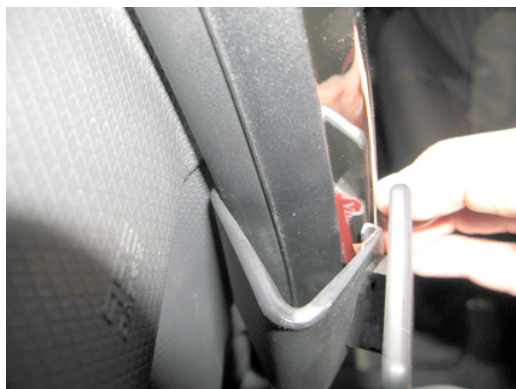

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Press the angled edge on the left part of the ProClip into the gap between the frame surrounding the center console and the dashboard.

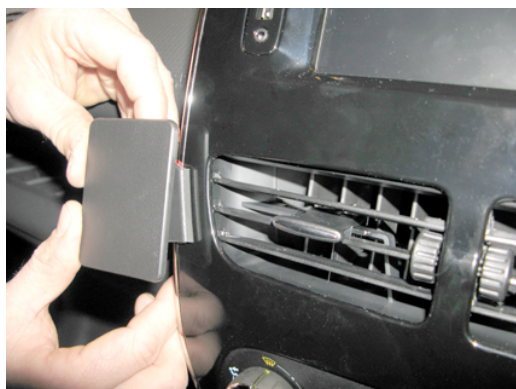

2. Press the ProClip rightward so the angled right edge hooks around the panel surrounding the air vent.

3. Press on the ProClip so it is properly in place.

4. The ProClip is in place.



Az alábbiakkal kompatibilis

- Renault Clio IV (2013-2016)

