




TELEPÍTÉS

ProClip

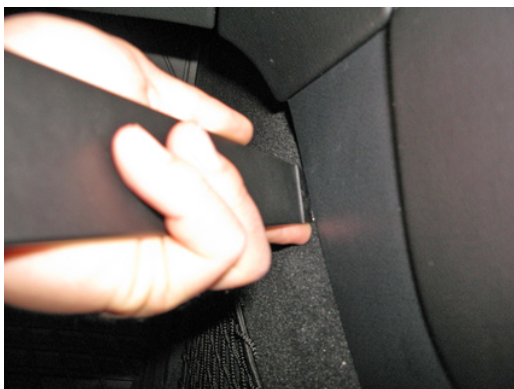

Please read all of the instructions and look at the pictures before installing the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Remove the adhesive tape cover on the ProClip. Hook the angled left side of the ProClip around the edge of the gap on the center console sidewall. Make sure the ProClip is not placed higher up than in the picture.



2. Pull the ProClip toward you, flexing it.

3. At the same time insert the angled right edge of the ProClip into the gap behind the wood paneling.

4. The ProClip is in place.



Az alábbiakkal kompatibilis

- Mercedes Benz GLC-Class (2016-2022)

