



# TELEPÍTÉS

## ProClip




Please read the instructions and look at the pictures before installing the ProClip.

1. Press the thin end of the enclosed gap opener into the gap between the frame surrounding the climate control panel and the center console panel, to widen the gap. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Remove the adhesive tape cover on the ProClip.



2. Press the angled right side of the ProClip into the gap next to the gap opener. Remove the gap opener.

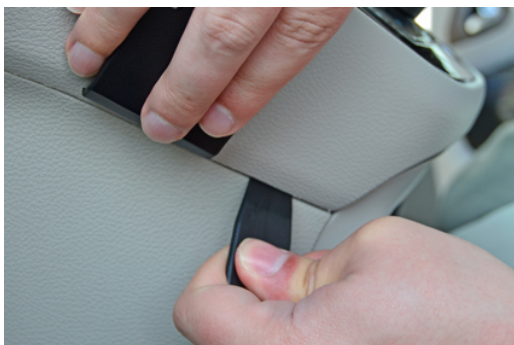

3. Press the thin end of the gap opener into the gap between the upper console sidewall panel and the lower console sidewall panel, to widen the gap. Push the left side of the ProClip firmly downward so the angled left edge hooks into the gap next to the gap opener. Remove the gap opener.

4. The ProClip is in place.



## Az alábbiakkal kompatibilis

- Chrysler Pacifica (2016-2024); Chrysler Voyager (2020-2024)