



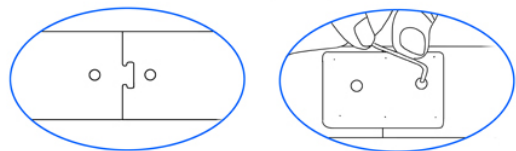

TELEPÍTÉS

ProClip

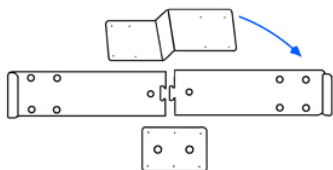

Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder/equipment is to be attached after the mount is in place. This mount consists of four parts.

1. Fit the sides of the mount together. Place the joining plate on the mount and secure with the included screws.
2. Attach the mounting plate onto the right end of the mount with the included screws.
3. Hold the mount over the screen so the mounting plate is on the driver's side. Slowly and firmly, press down on both sides of the mount to slide/hook it onto the screen. Gently flex the sides out to ease the installation. Press downward until the mount is securely in place.
4. The ProClip mount is in place.

Az alábbiakkal kompatibilis

- Tesla Model 3 (2024-2026)