

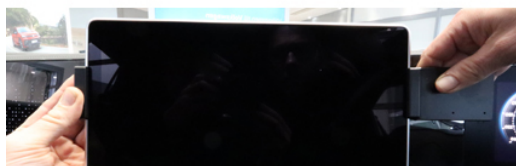


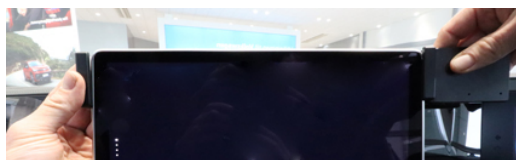

# TELEPÍTÉS

## ProClip

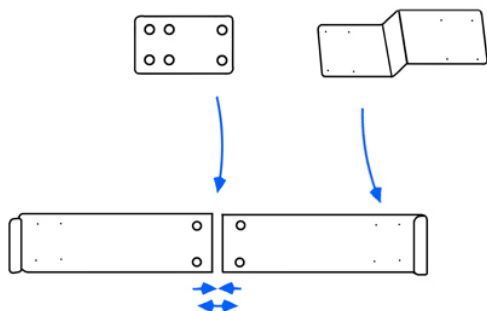

Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder/equipment is to be attached after the mount is in place. This mount consists of four parts.

1. This mount fits screens in several sizes. Place the joining plate on the textured side of the mount so the mount width matches your screen. Screw the parts together with the included screws. Place the mounting plate on the right side of the mount and attach it with the enclosed screws. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover.
2. Hold the mount over the screen so the mounting plate is on the driver's side.
3. Slowly and firmly, press down on both sides of the mount to slide/hook it onto the screen. Gently flex the sides out to ease the installation. Press downward until the mount is securely in place.
4. The ProClip mount is in place.

## Az alábbiakkal kompatibilis

- Volkswagen Crafter (2025-2026); Volkswagen ID. Buzz (2025-2026); Volkswagen ID.3 (2025-2026);

Volkswagen ID.4 (2025-2026); Volkswagen ID.5 (2025-2026); Volkswagen ID.7 (2025-2026); Volkswagen Passat (2025-2026); Volkswagen Tayron (2025-2026); Volkswagen Tiguan (2025-2026)

- Cupra Tavascan (2025-2026)
- MAN TGE (2025-2026)