




TELEPÍTÉS

ProClip

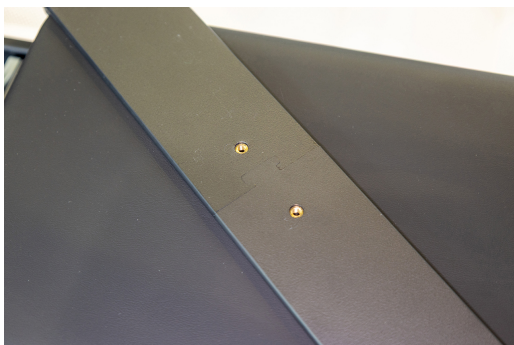

Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder/equipment is to be attached after the mount is in place.

1. Fit the two sides of the mount together.



2. Place the joining plate over the mount so the threaded inserts align. Secure the mount together using the included machine screws and wrench.

3. Place the mount over the screen. Flex the sides of the mount open and slide it downward over the screen. Slide the mount downward until the top of the mount is flush with the top of the screen frame. Press the mount down alternately one side at a time to ease the installation.



4. The ProClip mount is in place.

Az alábbiakkal kompatibilis

- Tesla Model Y (2025-2026)

