



# TELEPÍTÉS

## ProClip



Please read all of the instructions and look at the pictures before attaching the ProClip.


1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Press the angled edge on the upper part of the ProClip into the seam between the console sidewall and the frame or panel around the shifting area.



2. Press downward on the ProClip so the lower angled edge hooks under the lower section of the console sidewall.

3. The ProClip is in place.

4. The ProClip is in place.

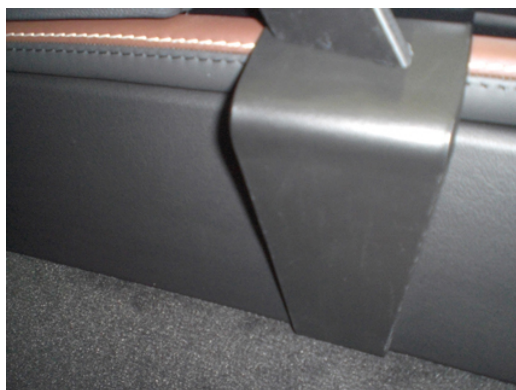

## Az alábbiakkal kompatibilis

- Jaguar F-Type (2013-2022)

