



TELEPÍTÉS

ProClip




Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder/equipment is to be attached after the mount is in place. This mount consists of two parts: a faceplate and a mount.



1. Hook the lower edge of the mount under the console sidewall.

2. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Pull the upper part of the mount upward. Hook the upper edge of the mount over the console edge without touching the surface. Hook the angled edge of the mount over the console edge. Press downward on top of the mount so it is properly in place.

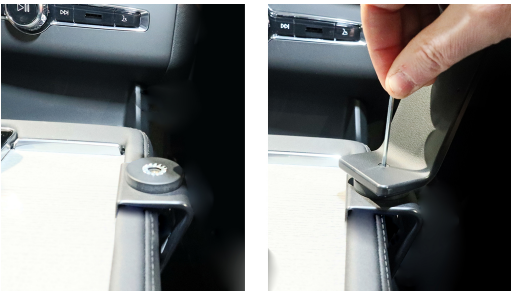

3. Place the included locking washer into the recess on top of the mount. Place the faceplate onto the mount. Adjust the faceplate into the desired angle. Attach the faceplate to the mount with the included screw.



4. The ProClip mount is in place.

Az alábbiakkal kompatibilis

- Volvo XC60 (2027-2026)