




TELEPÍTÉS

ProClip

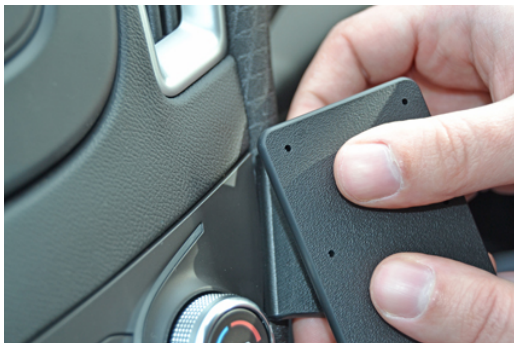

Please read all of the instructions and look at the pictures before installing the ProClip.

1. Press the angled left edge of the ProClip into gap between the climate control panel and the fabric covered panel. The top of the ProClip should align with the top of the climate control panel frame.



2. Press the right side of the ProClip forward, flexing it. Hook the right angled edge of the ProClip around and behind the fabric covered panel.

3. The ProClip is in place.

4. The ProClip is in place.



Az alábbiakkal kompatibilis

- Chevrolet Malibu (2016-2025)

