




TELEPÍTÉS

ProClip



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap opener into the gap between the center console top panel and side wall, to widen the gap.

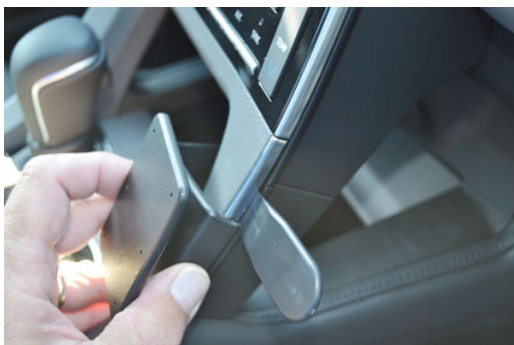

2. Press the thin edge of the right part of the ProClip into the gap next to the gap opener.

3. Press forward on the left side of the ProClip so the left J shaped edge hooks into the seam behind the center console post. Pull out the gap opener.

4. The ProClip is in place.



Az alábbiakkal kompatibilis

- Toyota Avalon (2019-2022)

