TELEPÍTÉS

ProClip






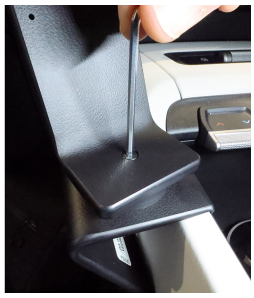


Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder/equipment is to be attached after the mount is in place. This mount consists of two parts: a faceplate and a mount.

1. Press the thin end of the included gap opener into the gap underneath the console sidewall, to widen the gap. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Press/Hook the lower edge of the mount into the gap next to the gap opener. Pull out the gap opener.

2. Pull the upper part of the mount upward and hook it over the console edge. Press down on top of the mount so it hooks into place properly.

3. Place the included locking washer into the recess on top of the mount. Place the faceplate onto the mount. Adjust the faceplate into the desired angle. The faceplate may be installed for use by the driver or the passenger. Attach the faceplate to the mount with the included screw.

4. The ProClip mount is in place.

Az alábbiakkal kompatibilis

- Skoda Peaq (2027)